



### 1. LOCATE THE ACTIVE SOUND DESIGN [ASD] MODULE

Location varies, consult the manufacturers documentation for your vehicle.

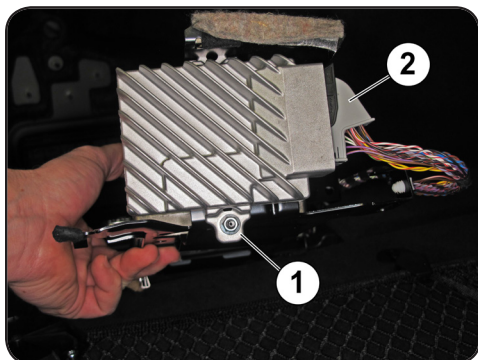


### 2. REMOVE THE ACTIVE SOUND DESIGN [ASD] MODULE

Using an 8mm socket, remove the nut (1) fastening the ASD module. Disconnect from the factory wiring harness (2) and remove.

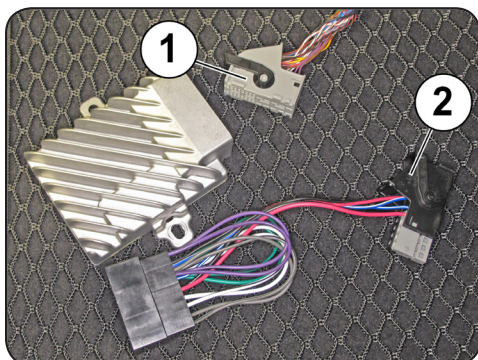


### 3. ASD WIRING HARNESS

The factory-installed gray connector housing (1) must be swapped with the black housing (2) that comes on the *ASD Harness*.

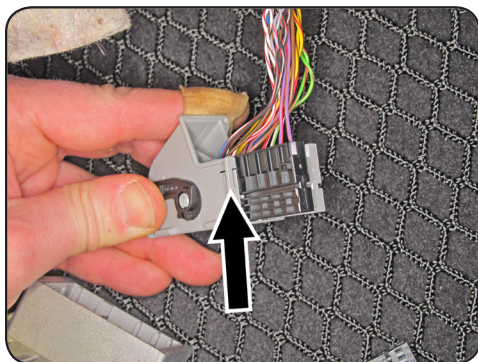

### 4. ASD WIRING HARNESS (STEP 2)

Remove the inner connectors from the gray housing by prying open the latch where indicated and sliding the inner connectors out. Repeat for the black housing on the *ASD Harness*.

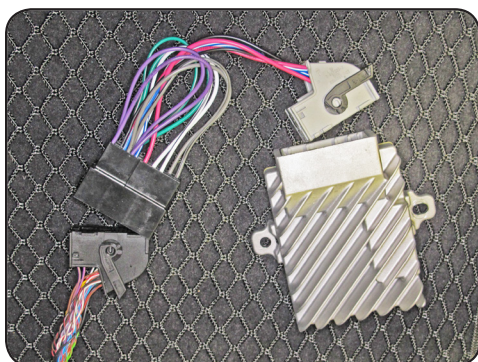

### 5. ASD WIRING HARNESS (STEP 3)

Swap the gray and black connector housings. The finished assembly should look like the picture at left: the original gray connector housing should be on the end of the *ASD Harness*, connecting to the ASD module, and the black housing should be connecting to the receptacle end of the *ASD Harness*.

Have a Question? Call us at 646-926-0011 or email us at [support@integralaudio.com](mailto:support@integralaudio.com).